

What do the letters stand for?

I
A
S
F
????

Comes from output post on Alternator (red ring terminal wire) ??? Can this come from battery instead ?

Why is this on output terminal ? with NO fuse ???

To 12v + Ignition

goes to green wire that runs inside alt (not plug)

goes to green wire that runs to alternator PLUG

Says 'Stator output' No connections

connects to wire on case of alternator ? case ground?

