


AveoFlash™ E-Series Wiring Diagram

Metal Aircraft


Composite Aircraft

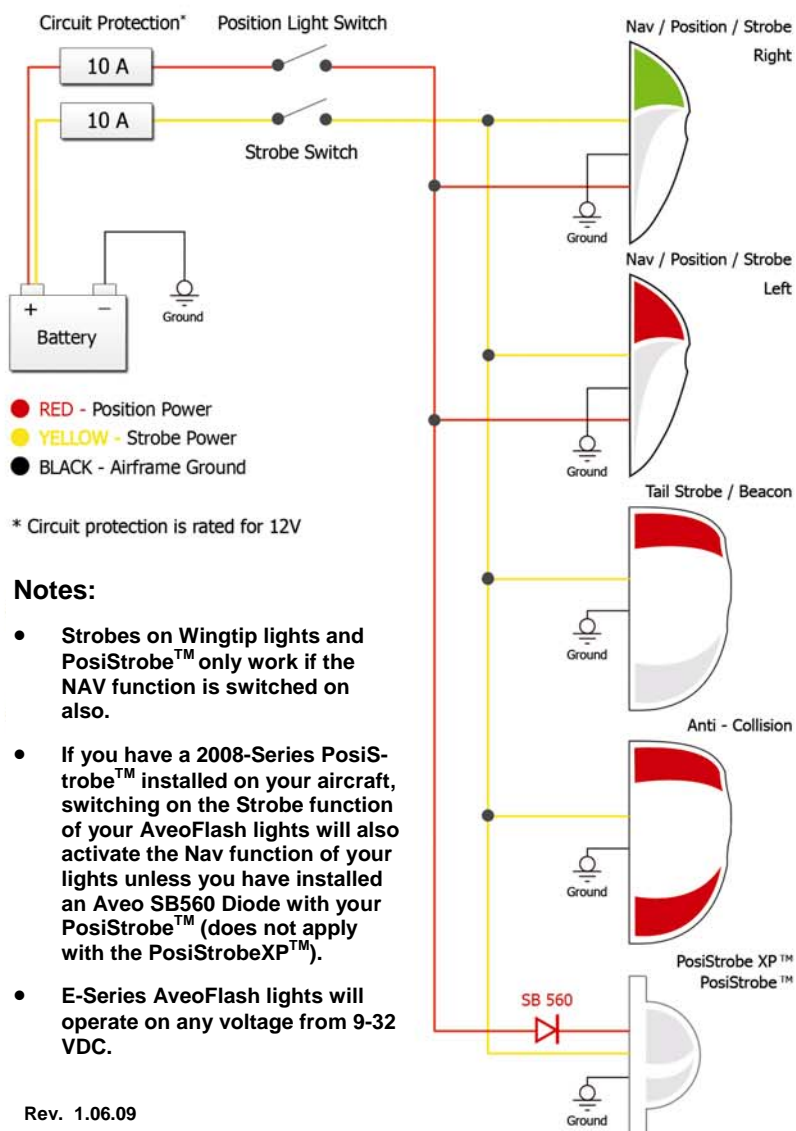

Notes:

- Strobes on Wingtip lights and PosiStrobe™ only work if the NAV function is switched on also.
- If you have a 2008-Series PosiStrobe™ installed on your aircraft, switching on the Strobe function of your AveoFlash lights will also activate the Nav function of your lights unless you have installed an Aveo SB560 Diode with your PosiStrobe™ (does not apply with the PosiStrobeXP™).
- E-Series AveoFlash lights will operate on any voltage from 9-32 VDC.

Rev. 1.06.09

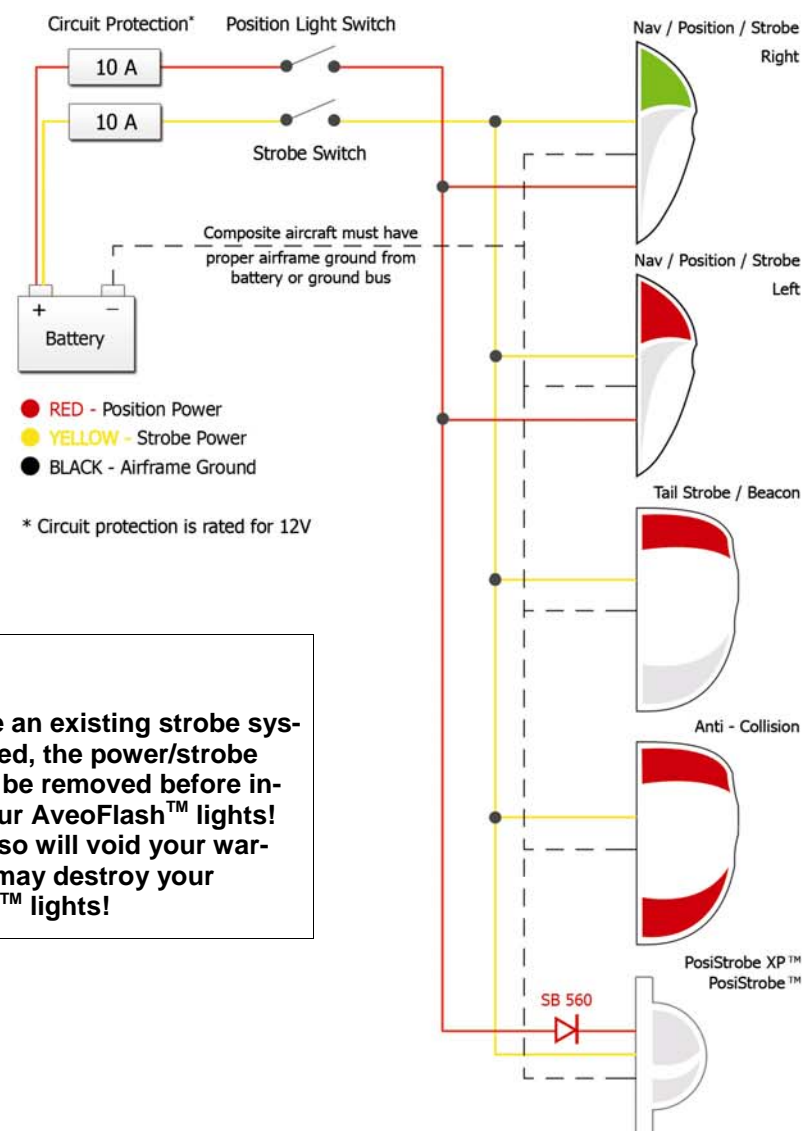

Warning:

If you have an existing strobe system installed, the power/strobe box MUST be removed before installing your AveoFlash™ lights! Not doing so will void your warranty and may destroy your AveoFlash™ lights!

If your AveoFlash lights have blue wires, those are for optional synchronization of the strobe flashes. You must have the green and red wingtip lights to initiate this function. If you do not want synchronization of your strobes, then simply do not connect and cap or cut off the blue wires.