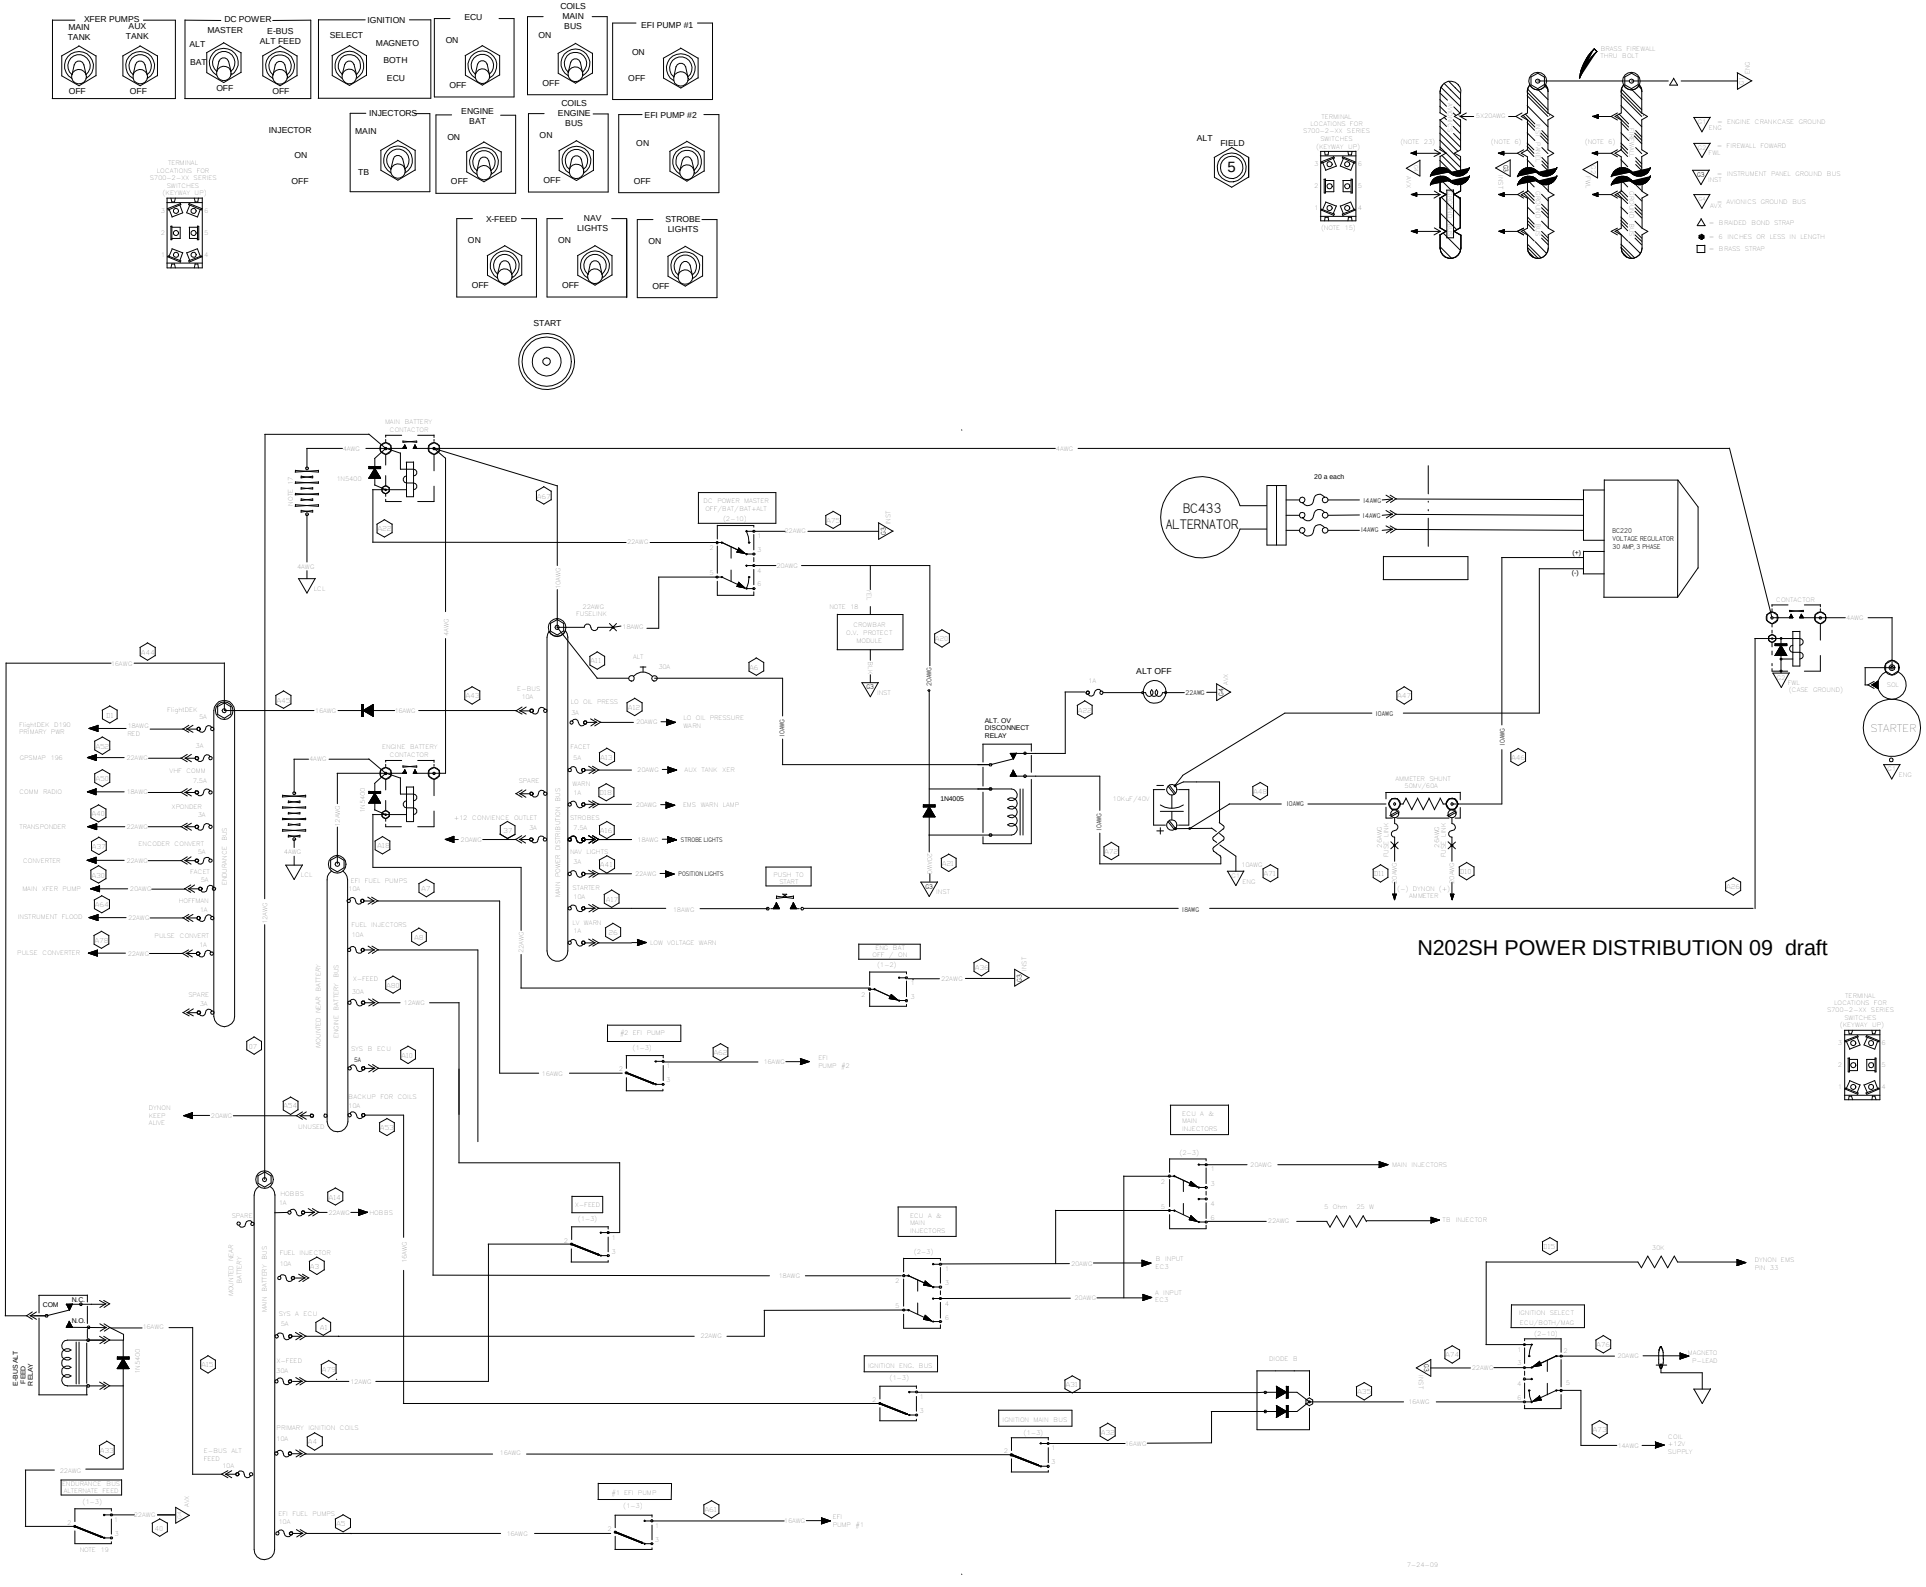
XFER PUMPS
MAIN TANK
AUX TANK
OFF
DC POWER
MASTER
ALT
BAT
E-BUS
ALT FEED
IGNITION
SELECT
MAGNETO
BOTH
ECU
ON
OFF
COILS MAIN BUS
EFI PUMP #1
INJECTOR
INJECTORS
MAIN
TB
ENGINE BAT
COILS ENGINE BUS
EFI PUMP #2
X-FEED
NAV LIGHTS
STROBE LIGHTS
START
ALT
FIELD
BRASS FIREWALL THRU BOLT
ENGINE CRANKCASE GROUND
FIREWALL FOWARD
INSTRUMENT PANEL GROUND BUS
AVIONICS GROUND BUS
BRAIDED BOND STRAP
6 INCHES OR LESS IN LENGTH
BRASS STRAP
MAIN BATTERY CONTACTOR
ENGINE BATTERY CONTACTOR
BC433 ALTERNATOR
20 a each
BC220 VOLTAGE REGULATOR 30 AMP, 3 PHASE
CONTACTOR
STARTER
ALT OFF
ALT. OV DISCONNECT RELAY
AMMETER SHUNT
CROWBAR O.V. PROTECT MODULE
PUSH TO START
MAIN POWER DISTRIBUTION BUS
ENDURANCE BUS
ENGINE BATTERY BUS
MAIN BATTERY BUS
LO OIL PRESSURE WARN
AUX TANK XER
EMS WARN LAMP
STROBE LIGHTS
POSITION LIGHTS
LOW VOLTAGE WARN
EFI FUEL PUMPS
FUEL INJECTORS
X-FEED
BACKUP FOR COILS
#2 EFI PUMP
EFI PUMP #2
ECU A & MAIN INJECTORS
MAIN INJECTORS
TB INJECTOR
IGNITION ENG. BUS
IGNITION MAIN BUS
DIODE B
IGNITION SELECT ECU/BOTH/MAG
MAGNETO P-LEAD
COIL 12V SUPPLY
DYNON EMS PIN 33
E-BUS/ALT FEED RELAY
AUTOMATIC ALTERNATE FEED
#1 EFI PUMP
EFI PUMP #1
N202SH POWER DISTRIBUTION 09 draft
7-24-09